

Jewel Seatpost 2012

Remote control

- all you should know about -

(Jan 2012)

Main parts

How to unplug from the seatpost?

How to plug into the seatpost?


How it works?

How to replace the cable?


How to adjust it?




blacx

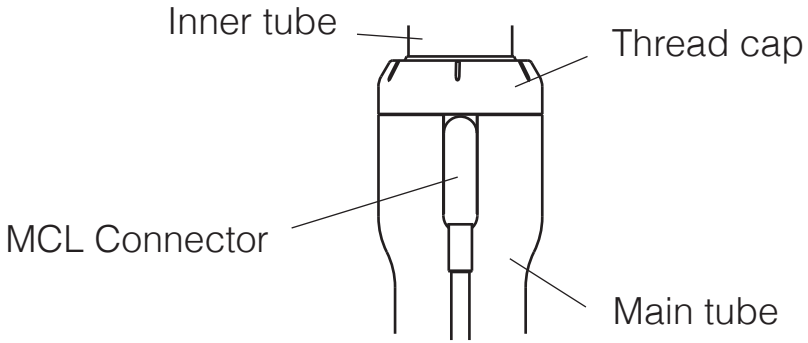

MCL Connector sockets

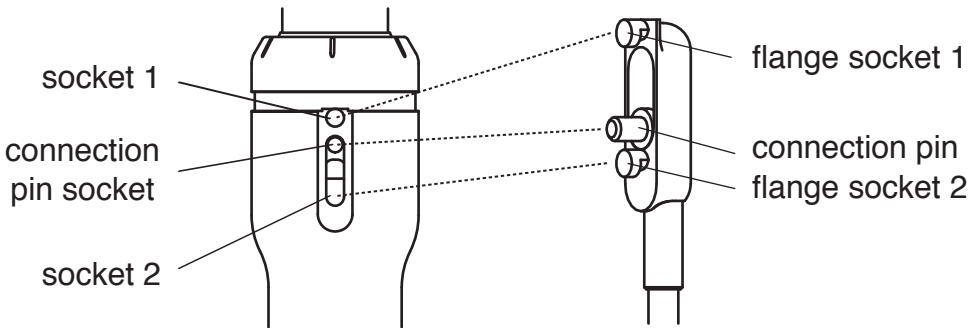

Remote control

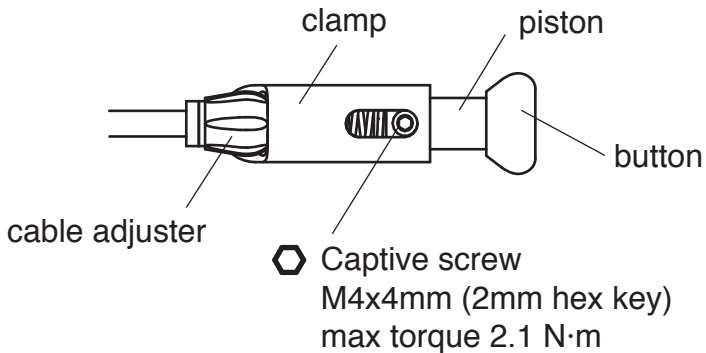


How to unplug from the seatpost?



1

Unscrew
the thread cap

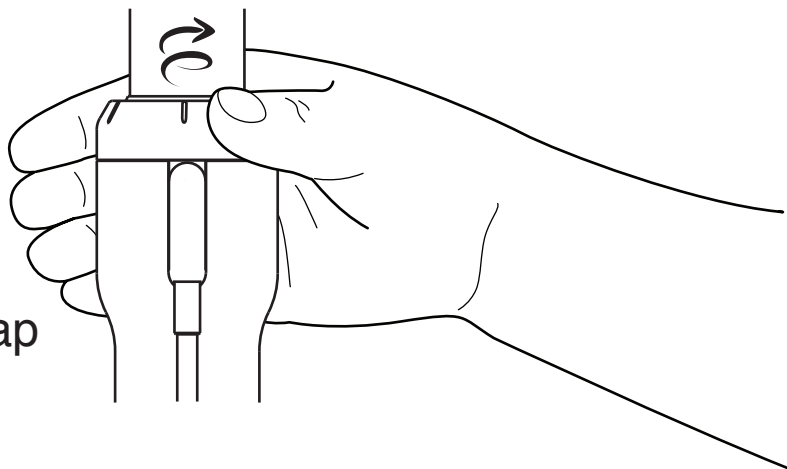


3

... to automatically
unplug!

2


and just press here ...

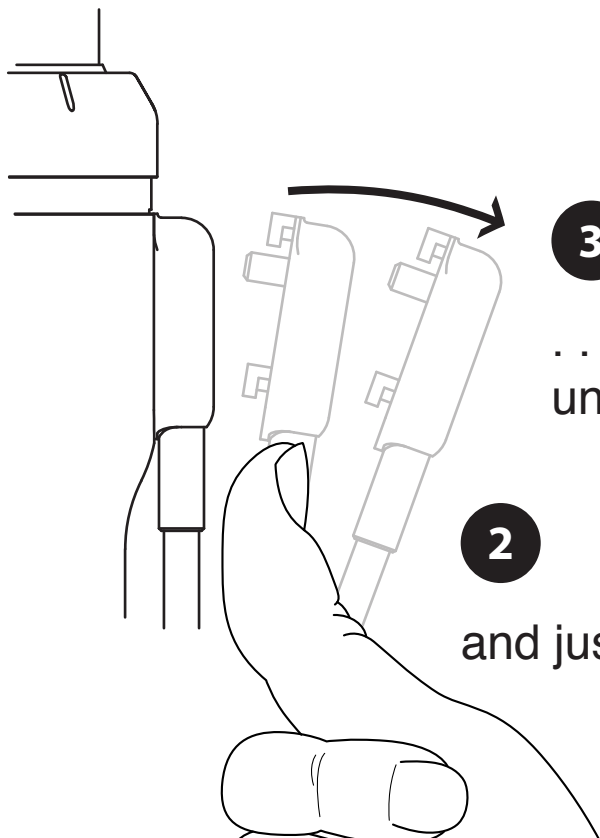


How to plug into the seatpost?




1

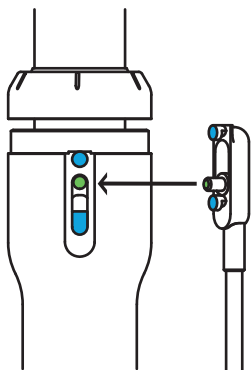

Align connection pin into his socket.

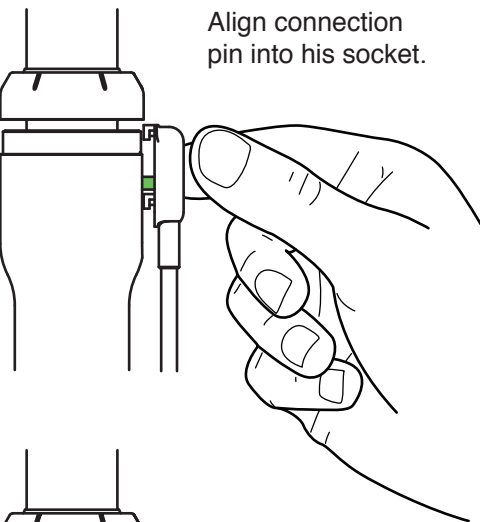


2

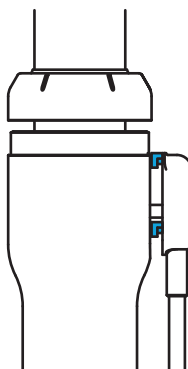


Push down the MCL Connector until align flanges 1 and 2 to his sockets.

3

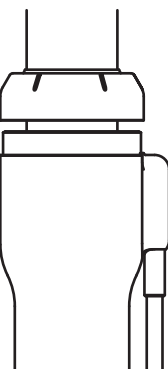


Push flanges 1 and 2 into his socket.

4

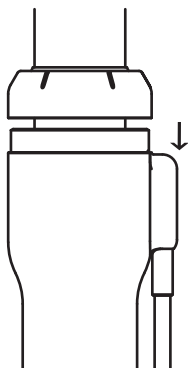

Push down the MCL Connector to lock flanges 1 and 2 into his sockets.

5

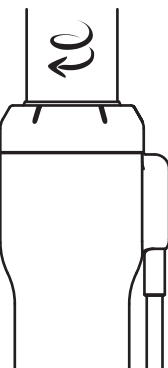


Maintain pushed down the MCL Connector and screw by hand the thread cap.

How it works?




unpressed

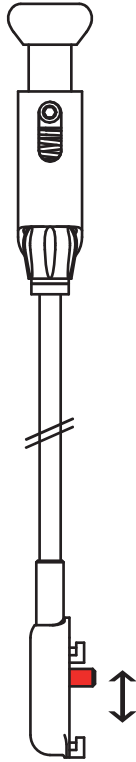

locked

pressed

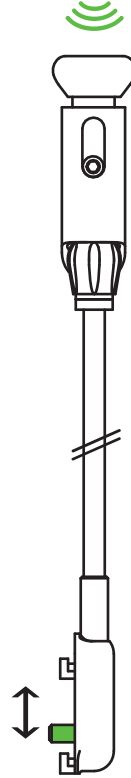


released

How to replace the cable? (1/4)




2

Unscrew captive screw to release the cable.
(not fully)

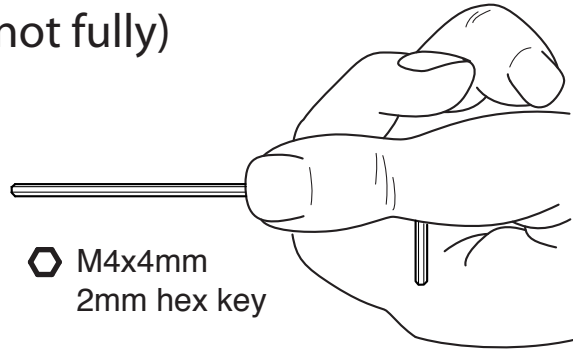


⬡ M4x4mm
2mm hex key

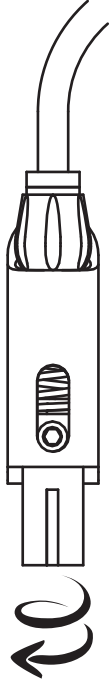

1


Unscrew thumb button

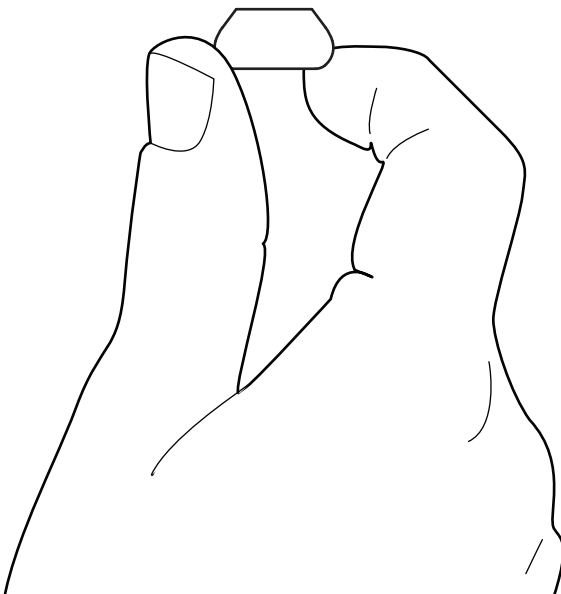

How to replace the cable? (2/4)




3

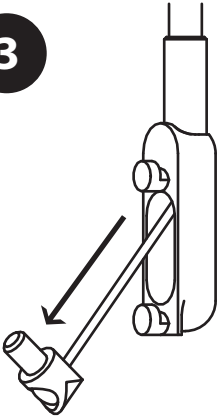


Pull the cable out.

4

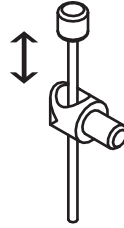


Remove connection pin from old cable.

5

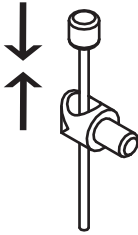

Insert connection pin on new cable.

6

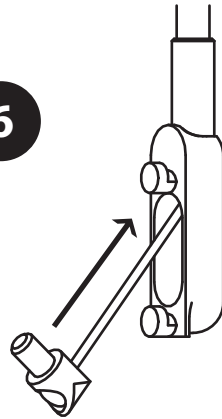


Insert cable on housing through MCL connector.

How to replace the cable? (3/4)



7

Set the adjuster at minimum.

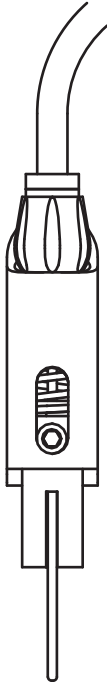

10

Cut the cable as close as possible.




8

Pass cable through piston.

9

Pull the cable, give it a bit of tension, and tight the captive screw.

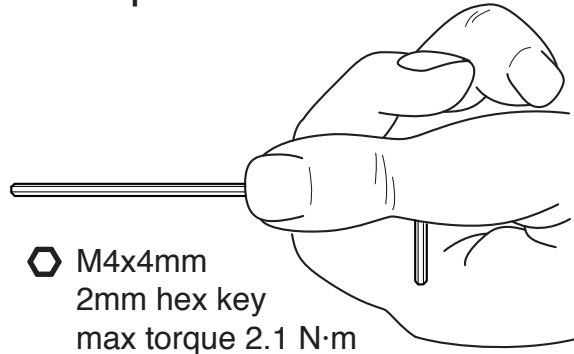


⬡ M4x4mm
2mm hex key
max torque 2.1 N·m

MCL Connector should look like this:



How to replace the cable? (4/4)

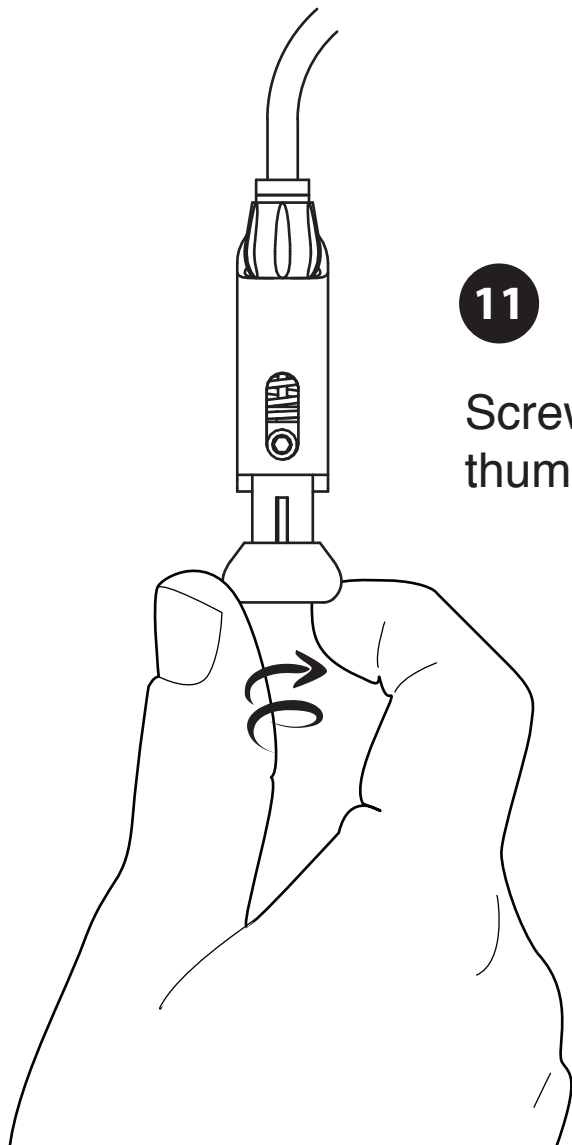

11

Screw
thumb button

How to adjust it?



Tight cable
if doesn't lock.



Loose cable
if doesn't release.

